

Locking and Unlocking Bistro 10 Buttons

Activate Lock:

Powder recipes lock – press decaf button 4 times rapidly.

All keys lock – press decaf button 5 times rapidly. **Note:** On the Bistro 10 Short series this button is the coffee cup underneath the Hot Chocolate button.



** While locked the display will alternate displaying 'All keys locked' or 'powder recipes locked' and 'place cup...' **

Deactivating Lock:

Powder recipes unlock – press decaf button 4 times rapidly.

All keys lock – Press decaf button 5 times rapidly. **Note:** On the Bistro 10 Short series this button is the coffee cup underneath the Hot Chocolate button.

When unlock buttons the display will stop alternating displaying lock message and will just say 'place cup...' message.

**Powering down the machine does not reset the lock mode, the button needs to be pressed 4 or 5 times rapidly to disable the lock mode that is active. **

