



Operating Instruction Manual Model BISTRO-TCH Including Touchless QR Code Capability 1-800-325-7867

3650 NEW TOWN BLVD ST. CHARLES MO 63301



WWW.NEWCOCOFFEE.COM

Table of Contents

Introduction & Newco Product Warranty	4
Machine Dimensions & Specifications	5
Machine Features	6
Plumbing Connections	7
Plumber's Installation Instructions	7
Electrical Hook-Up	7
Installation Instructions	8
Set up instructions	9
Product Installation Procedure	9
Machine Startup Instructions	10
Brewing Drinks	11
Drink Submenu	12
Programming Instructions	13
Custom Logo-Wi-Fi Setup	17
Install Custom Logo (Sleep Screen)	18
ProgrammingQR Codes	21
Daily Cleaning Instructions	25
Whipper Disassembly	26
Cleaning & Sanitizing Instructions	27
Wiring Diagram	32

Warning Labels

NOTICE: Read and follow all notices posted on this machine. Do not damage or destroy these notices as they are for your protection

WARNING

DO NOT USE PLASTIC TUBING WHEN INSTALLING WATER LINE. USE COPPER TUBING

THIS EQUIPMENT IS TO BE INSTALLED TO COMPLY WITH THE BASIC PLUMBING CODE OF THE BUILDING OFFICIALS AND CODE ADMINISTRATORS INTERNATIONAL, INC. (BOCA) AND THE FOOD SERVICE SANITATION MANUAL OF THE FOOD AND DRUG ADMINISTRATION (FDA).

WARNING

- DO NOT OVERLOAD CIRCUIT.
 - ALWAYS ELECTRICALLY GROUND THE CHASSIS OR ADAPTOR PLUG.
- DO NOT DEFORM PLUG OR CORD.
- FOLLOW NATIONAL AND LOCAL
 - ELECTRICAL CODES.
 - KEEP COMBUSTIBLES AWAY

FAILURE TO COMPLY RISKS EQUIPMENT DAMAGE, FIRE OR SHOCK HAZARD.

READ THE ENTIRE OPERATING
MANUALBEFORE USING THIS PRODUCT



Introduction & Newco Product Warranty

WARRANTY

This warranty supersedes all other previous warranties that are currently in manuals.

Newco warrants equipment manufactured by it for 1 year parts and labor.

Accessories, Dispensers, and Display Tablets - 1 Year parts only.

Electronic Circuit and Control Boards- 3 years parts, 1 year labor.


Equipment manufactured by others and distributed by Newco-please see original equipment manufacturers warranty, Newco will follow.

These warranty periods run from the date of sale Newco warrants that the equipment manufactured by it will be commercially free of defects in material and workmanship existing at the time of manufacture and appearing within the applicable warranty period. This warranty does not apply to any equipment, component or part that was not manufactured by Newco or that, in Newco's judgment, has been affected by misuse, neglect, alteration, improper installation or operation, relocation or reinstallation, improper maintenance or repair, incorrect voltage applied to the unit at any time, damage or casualty. This warranty does not apply to any equipment failures related to poor water quality, excessive lime and chlorine and non periodic cleaning and descaling. Warranty is null and void if muriatic or any other form of hydrochloric acid is used for cleaning or deliming. In addition, this warranty does not apply to replacement of items subject to normal use including but not limited to user replaceable parts such as faucet seat cups, sight gauge tubes, washers, o-rings, tubing, seals and gaskets. This warranty is conditioned on the Buyer 1) giving Newco prompt notice of any claim to be made under this warranty by telephone at (800) 556-3926 or by writing to 3650 New Town Blvd, Saint Charles, MO 63301; 2) if requested by Newco, shipping the defective equipment prepaid to an authorized Newco service location; and 3) receiving prior authorization from Newco that the defective equipment is under warranty. THE FOREGOING WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ANY OTHER WARRANTY, WRITTEN OR ORAL, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF EITHER MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. The agents, dealers or employees of Newco are not authorized to make modifications to this warranty or to make additional warranties that are binding on Newco. Accordingly, statements by such individuals, whether oral or written, do not constitute warranties and should not be relied upon. If Newco determines in its sole discretion that the equipment does not conform to the warranty, Newco, at its exclusive option while the equipment is under warranty, shall either 1) provide at no charge replacement parts and/or labor (during the applicable parts and labor warranty periods specified above) to repair the defective components, provided that this repair is done by a Newco Authorized Service Representative: or 2) shall replace the equipment or refund the purchase price for the equipment.

THE BUYER'S REMEDY AGAINST NEWCO FOR THE BREACH OF ANY OBLIGATION ARISING OUT OF THE SALE OF THIS EQUIPMENT, WHETHER DERIVED FROM WARRANTY OR OTHERWISE, SHALL BE LIMITED, AT NEWCO'S SOLE OPTION AS SPECIFIED HEREIN, TO REPAIR, REPLACEMENT OR REFUND.

Machine Dimensions & Specifications

120 VAC-1600W HEATER-15A USA POWER SUPPLY 120 VAC-1400W HEATER-15A CANADIAN POWER SUPPLY 1/2 GALLON TANK 6-20 OZ CUP SIZE TEMPERATURE RANGE 140-205F

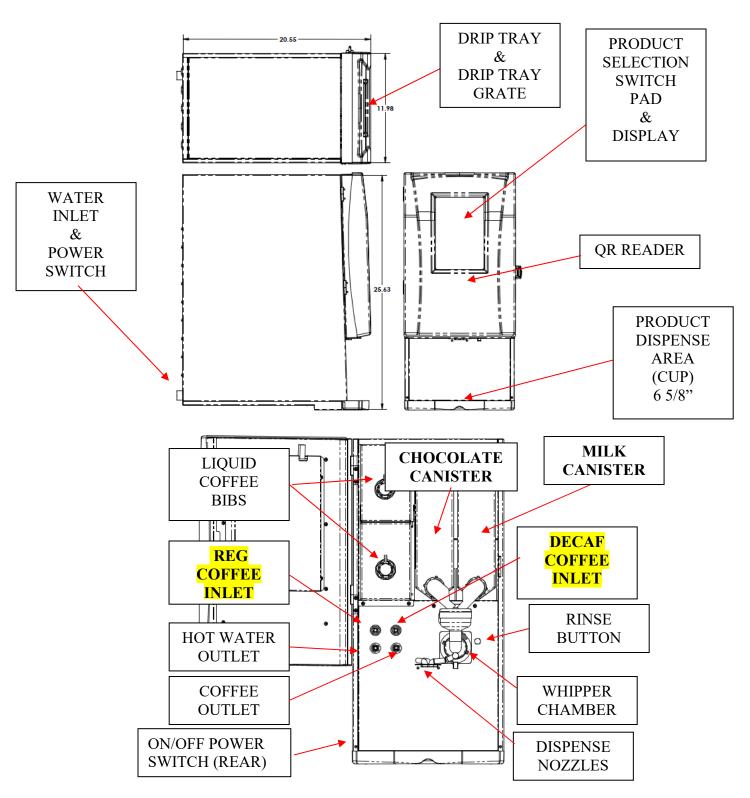

Machine Features

- TOUCH SCREEN OPERATION
- CUSTOMIZED LOGO SCREEN
- DECAF BUTTON SWITCHES TO DECAF BIB
- WHIPPER RINSE BUTTON
- AUTOMATIC POWDER LEVEL RESET
- PRE-PROGRAMMED DRINK RECIPES
- 6-8-10-12-16-20 OUNCE DRINK CHOICES
- CUP SELECTION MENU
- INDEPENDENT POWDER HOPPER COUNTDOWN & RESET
- CUSTOM CALL FOR SERVICE NUMBER
- POWER SAVE & POWER DOWN OPTION
- WATER FILTER MONITORING OPTIONS
- PUSH & HOLD HOT WATER BUTTON
- DUMP VALVE DELIVERY FOR POWDERS
- 4 LB HOPPER SIZE
- SEMI-AUTOMATIC CLEANING CYCLE
- QR READER CAPABILITY
- CUSTOM DRINK / BLEND NAMES
- ABILITY TO TURN ON/OFF DRINK SIZE, STRENGTH

Plumbing Connections

Plumber's Installation Instructions

CAUTION: Disconnect Power to machine before proceeding with plumbing installation.

- 1) Attach water line to water filter, rear of machine.
- 2) Flush water line before installing machine. Machine should be connected to COLD WATER LINE ONLY.
- Water pressure should be at least 40 lbs. For less than a 25 ft run, use 1/4" copper tubing and connect to 1/2" or larger water line. For longer runs, use 3/8" copper tubing & connect to 1/2" or larger water line and provide an adapter fitting for connection to the brewer. A dedicated water line is necessary for this machine. Minimum flow rate is 1GPM.
- 4) If installed with saddle valve, the valve should have a minimum of 1/8" porthole for up to 25 ft run, and 5/16" porthole for over 25 ft runs.
- 5) Manufacturer recommends connecting to copper tubing.

Electrical Hook-Up

<u>WARNING</u>

The Machine must be disconnected from the power source until specified in Installation Instructions.

Determine the available on-site electrical requirements

Refer to Data Plate on the Machine, and local/national electrical codes to determine circuit requirements.

CAUTION – Improper electrical installation will damage electronic components.

Installation Instructions

WARNING: - Read and follow installation instructions before plugging or wiring in machine to electrical circuit. Warranty will be void if machine is connected to any voltage other than that specified on the nameplate serial tag.

Machine must be on a flat and level surface. Plug or wire in machine to appropriate voltage as noted on the brewer serial tag. Serial tag is located on inside of machine.

Brew water temperature is factory set at 1800 F
Areas of high altitude will require lowering this temperature to
prevent boiling. This chart should be used as a guide when
readjusting the brew water temperature.

readjusting the brew water temperature.			
Altitude	Boiling point of	Recommended water	
(Feet)	water o F o C	temperature o F o C	
-1000	213.8 101.0	200 93.3	
-500	212.9 100.5	200 93.3	
0	212.0 100.0	200 93.3	
500	211.1 99.5	200 93.3	
1000	210.2 99.0	200 93.3	
1500	209.3 98.5	200 93.3	
2000	208.4 98.0	200 93.3	
2500	207.4 97.4	200 93.3	
3000	206.5 96.9	199 92.8	
3500	205.6 96.4	198 92.2	
4000	204.7 95.9	197 91.7	
4500	203.8 95.4	196 91.1	
5000	202.9 94.9	195 90.6	
5500	201.9 94.4	195 90.6	
6000	201.0 93.9	194 90.0	
6500	200.1 93.4	193 89.4	
7000	199.2 92.9	192 88.9	
7500	198.3 92.4	191 88.3	
8000	197.4 91.9	190 87.8	
8500	196.5 91.4	189 87.2	
9000	195.5 90.8	188 86.7	
9500	194.6 90.3	187 86.1	
10000	193.7 89.8	186 85.6	

Set up instructions


This machine is intended to brew a 6-20 ounces single serving of coffee and / or powdered hot drinks into a cup. This machine will also dispense hot water for allied beverage use. It is intended for indoor use only on a sturdy counter or shelf.

Fill and install ingredient hoppers with nozzles turned up, Chocolate on left and Milk on right. Make sure "button" on bottom of hopper is seated in slot in sheet metal. Slight manual rotation of the auger gear may be necessary to seat hopper in correct location.

Rotate dispense nozzles down into whipper bowl.

Product Installation Procedure



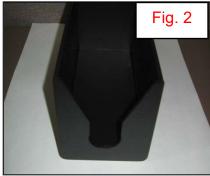



- Open product box and remove the BIB product **Fig. 1**. Place in Coffee BIB Tray, **Fig. 2**, (Newco PN 121929) as shown in **Fig. 3**
- Remove the plastic insert from the BIB fitment as shown in Fig. 4
- Using finger and thumb only to prevent over-tightening, thread the BIB connector on to the BIB fitment until seated as shown in **Fig. 5**
- Place the product in the storage compartment as shown in Fig's. 6
 & 7
- Position tubing as shown in Fig. 7

NOTE COFFEE BIB IS LH CONNECTOR AND DECAF BIB IS RH CONNECTOR SEE PAGE 5










Machine Startup Instructions

Fill and install 4lb hoppers with nozzles turned up, Chocolate on left and Milk on right.

Make sure "button" on bottom of hopper is seated in slot in sheet metal. Slight manual rotation of the auger gear may be necessary to seat hopper in correct location.

Rotate dispense nozzles down into whipper bowl.

Ensure that there is a proper water supply connected to the machine and water is turned on. Ensure that the machine is plugged into a proper power outlet and there is power supplied to the machine. Turn machine power switch on, machine should start filling, will shut off when full. The Touch Screen Display will indicate when the machine is filling.

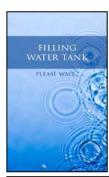

Heater will turn on when water in tank is at probe level and will display Heating: Please Wait. The heating process can take 10-15 minutes before the machine is ready to brew.



When machine temperature reaches brew temp, display will change to the Drink Instruction Screen. The machine is now ready for operation.



Touching the Start Screen will bring up the Drink Selection Menu


Place an empty cup in the brewing area, open the powdered hopper door, and depress the "Rinse" button next to the whipper bowl until the water runs clear




Brewing Drinks

To dispense a drink, place a cup under the dispense area, press a brew selection, choose a cup size and press "Brew" button. (see page 12)


Once a selection is made a Submenu for Drink Settings will appear-see page 12

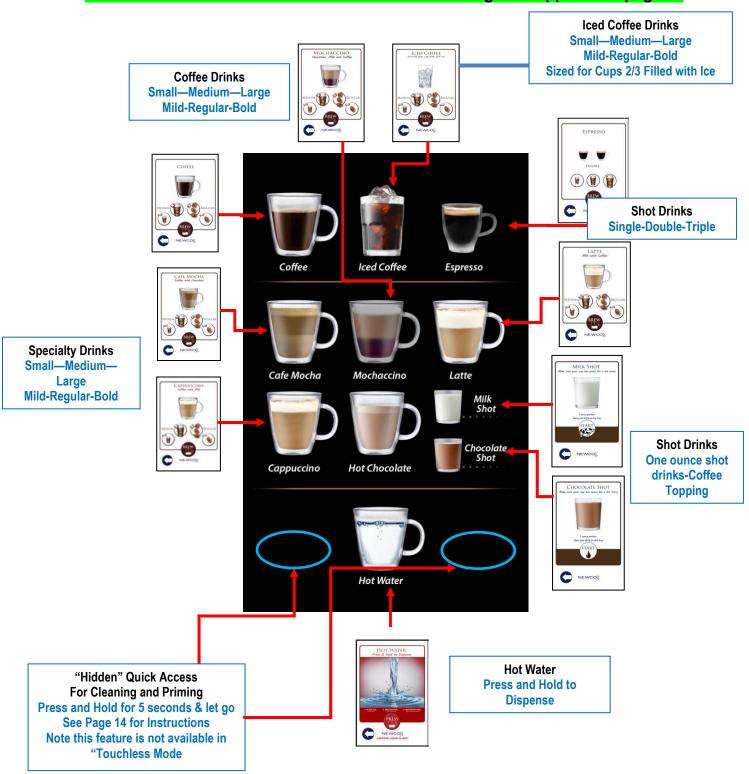

Drink Submenu

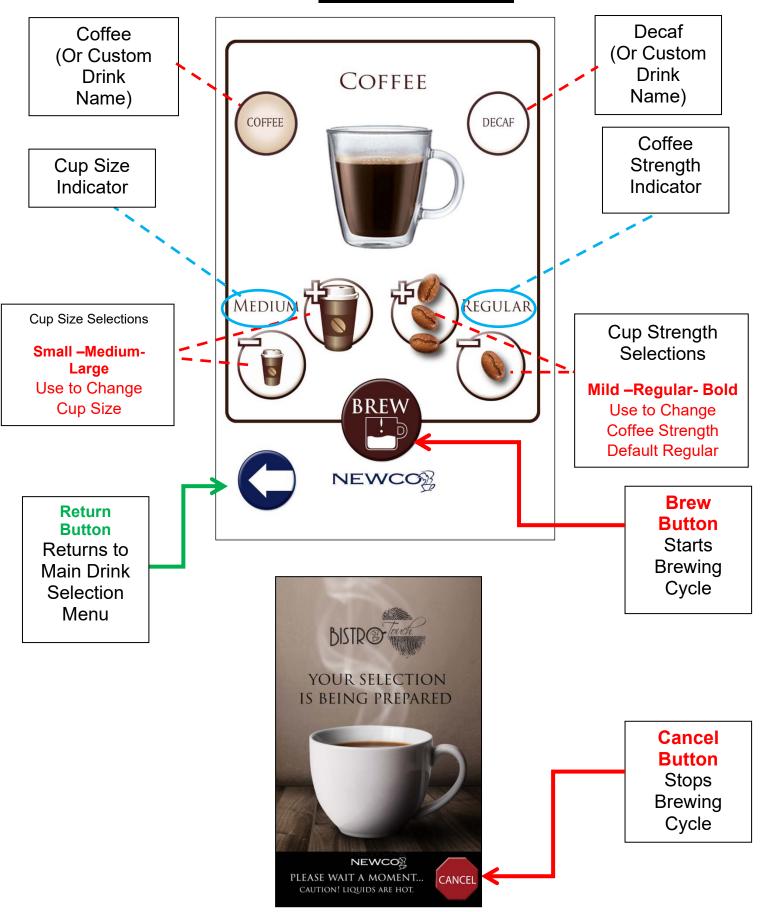


Programming Instructions

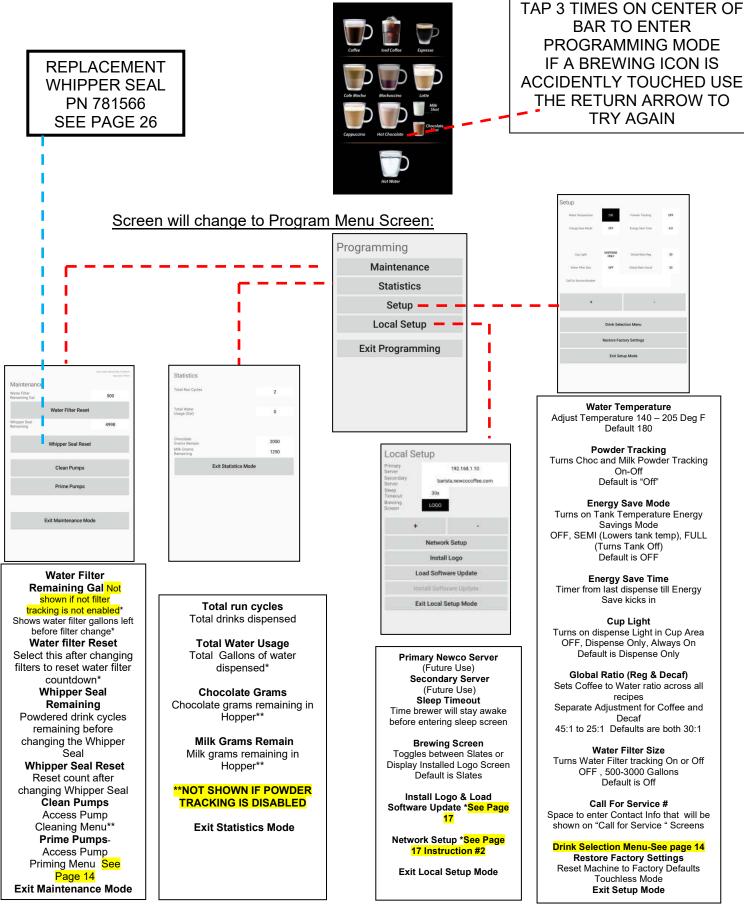

Programming-Cont'd.

Drink Selection Menu

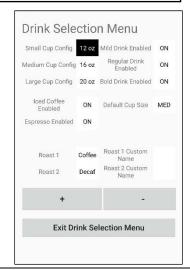

Drink Selection Menu

Ability to turn Drink Selections and/or Cup Sizes On or Off

Cup Size Choices are 6-8-10-12-16-20 Ounces or OFF Drink Strengths are Mild-Regular-Bold Iced Drinks can be turned Off or On Default Cup size

Determines which cup size will Dispense by Default


Custom Drink Names

Exit Drink Selection Mode


(custom)
Café Blend
Coffee
Colombian
Dark Roast
Decaf
Espresso Roast
French Roast
Italian Roast
Light Roast
Medium Roast
Pumpkin
Shakin Jamaican
Sumatra

Roast 1 default as coffee Roast 2 default as decaf.

If custom is selected then whatever is typed in Roast1/2 custom name will be displayed on the drink

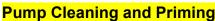

14

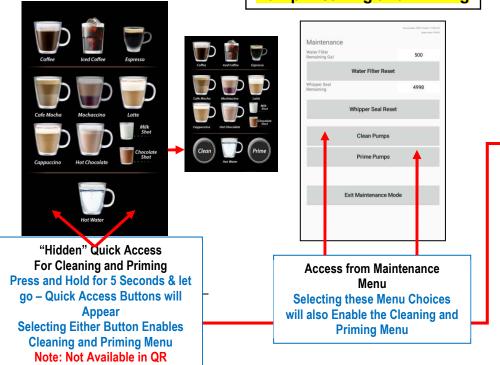

Touchless Mode

Cleaning and Priming

Connect cleaning solution to BIB connector (Coffee or Decaf).

Clean Coffee Pump

Clean Decaf Pump

Start Cycle

Prime Coffee Pump

Prime Decaf Pump

Exit Cleaning and Priming

Cleaning and Priming Menu

This Menu Enables the Coffee Lines to be Cleaned and Sanitized then Re-Primed Follow Instructions at top of Menu. Refer to Page 27

Programming-Cont'd

SECONDARY PROGRAMMING MODE (SERVICE MENU) RECIPES AND CALIBRATION




TAP 3 TIMES ON CENTER OF TOP BAR

THEN TAP 3 TIMES ON CENTER OF BOTTOM BAR TO ENTER SECONDARY PROGRAMMING MODE

IF A BREWING ICON IS ACCIDENTLY TOUCHED USE THE RETURN ARROW TO TRY AGAIN

CALIBRATION

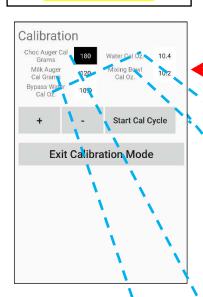

Programming

Maintenance

Statistics

Setup

Calibration

Recipe Entry

Local Setup

Exit Programming

RECIPE ENTRY-SEE NEXT PAGE



Choc Auger Cal-and hold a 12-ounce plastic cup under the left
auger dispense spout, and with the "Choc
Auger Grams" value selected press "Start
Cal Cycle" button to start calibration
countdown period. After cycle has completed
use the + and - buttons to toggle the value,
increasing or decreasing value until the
display number matches the amount of the
powder measured in grams.

Calibration Des Auge Calibration 50 trees Calibration 100 Make Auge Calibration 50 Makes Blood 100 + - Running -- Press to Cancel Exit Calibration Mode

Milk Cal-- remove whipper chamber and hold a 12-ounce plastic cup under the left auger dispense spout, and with the "Milk Auger Grams" value selected press "Start Cal Cycle" button to start calibration countdown period. After cycle has completed use the + and - buttons to toggle the value, increasing or decreasing value until the display number matches the amount of the powder measured in grams.

Water (for Coffee) Cal & Bypass Water Cal

Insert a measuring container capable of holding 32 or more ounces of water under delivery area of machine, and with the "Water Cal oz" value selected press "Start Cal Cycle" button to start calibration countdown period. After cycle has completed use the + and - buttons to toggle the value, increasing or decreasing value until the display number matches the amount of the water measured in Ounces.

Mix Bowl Cal--, Insert a measuring container capable of holding 32 or more ounces of water under delivery area of machine, and with the "Mixing Bowl Caloz" value selected press "Start "Cal Cycle" button to start calibration countdown period. After cycle has completed use the + and - buttons to toggle the value, increasing or decreasing value until the display number matches the amount of the water measured in Ounces.

Programming-Cont'd

NOTE
Factory Reset Will
NOT Change Recipes
to Default Values

SCROLL THROUGH
RECIPES BY
SELECTING RECIPE
NUMBER AS SHOWN
THEN USE PLUS
AND MINUS (+ -)
BUTTONS TO
SCROLL UP AND
DOWN

CHANGE RECIPE
VALUES BY VALUE
IN RECIPE FIELD
THEN USE PLUS
AND MINUS (+ -)
BUTTONS TO
SCROLL UP AND
DOWN



Note: Changing the values in these recipes can result in changes in cup volume and taste profile and should be performed by authorized personnel only.

SAVE RECIPE
CHANGES BEFORE
EXITING RECIPE
ENTRY MODE
VALUES WILL NOT
UPDATE UNTIL
RECIPE IS SAVED

Recipe List

		. (CC.PC = 1C	<u> </u>	
0 Coffee 6oz Mild	27 Iced Coffee 12oz Mild	54 Cappuccino 6oz Sgl	81 Hot Cocoa 12oz Mild	108 Mochaccino 20oz Sgl
1 Coffee 6oz Reg	28 Iced Coffee 12oz Reg	55 Cappuccino 6oz Dbl	82 Hot Cocoa 12oz Reg	109 Mochaccino 20oz Dbl
2 Coffee 6oz Bold	29 Iced Coffee 12oz Bold	56 Cappuccino 6oz Tpl	83 Hot Cocoa 12oz Bold	110 Mochaccino 20oz Tpl
3 Coffee 8oz Mild	30 Iced Coffee 16oz Mild	57 Cappuccino 8oz Sgl	84 Hot Cocoa 16oz Mild	111 Cafe Mocha 6oz Mild
4 Coffee 8oz Reg	31 Iced Coffee 16oz Reg	58 Cappuccino 8oz Dbl	85 Hot Cocoa 16oz Reg	112 Cafe Mocha 6oz Reg
5 Coffee 8oz Bold	32 Iced Coffee 16oz Bold	59 Cappuccino 8oz Tpl	86 Hot Cocoa 16oz Bold	113 Cafe Mocha 6oz Bold
6 Coffee 10oz Mild	33 Iced Coffee 20oz Mild	60 Cappuccino 10oz Sgl	87 Hot Cocoa 20oz Mild	114 Cafe Mocha 8oz Mild
7 Coffee 10oz Reg	34 Iced Coffee 20oz Reg	61 Cappuccino 10oz Dbl	88 Hot Cocoa 20oz Reg	115 Cafe Mocha 8oz Reg
8 Coffee 10oz Bold	35 Iced Coffee 20oz Bold	62 Cappuccino 10oz Tpl	89 Hot Cocoa 20oz Bold	116 Cafe Mocha 8oz Bold
9 Coffee 12oz Mild	36 Latte 6oz Single	63 Cappuccino 12oz Sgl	90 Espresso Shot Single	117 Cafe Mocha 10oz Mld
10 Coffee 12oz Reg	37 Latte 6oz Double	64 Cappuccino 12oz Dbl	91 Espresso Shot Double	118 Cafe Mocha 10oz Reg
11 Coffee 12oz Bold	38 Latte 6oz Triple	65 Cappuccino 12oz Tpl	92 Espresso Shot Triple	119 Cafe Mocha 10oz Bld
12 Coffee 16oz Mild	39 Latte 8oz Single	66 Cappuccino 16oz Sgl	93 Mochaccino 6oz Sgl	120 Cafe Mocha 12oz Mld
13 Coffee 16oz Reg	40 Latte 8oz Double	67 Cappuccino 16oz Dbl	94 Mochaccino 6oz Dbl	121 Cafe Mocha 12oz Reg
14 Coffee 16oz Bold	41 Latte 8oz Triple	68 Cappuccino 16oz Tpl	95 Mochaccino 6oz Tpl	122 Cafe Mocha 12oz Bld
15 Coffee 20oz Mild	42 Latte 10oz Single	69 Cappuccino 20oz Sgl	96 Mochaccino 8oz Sgl	123 Cafe Mocha 16oz Mld
16 Coffee 20oz Reg	43 Latte 10oz Double	70 Cappuccino 20oz Dbl	97 Mochaccino 8oz Dbl	124 Cafe Mocha 16oz Reg
17 Coffee 20oz Bold	44 Latte 10oz Triple	71 Cappuccino 20oz Tpl	98 Mochaccino 8oz Tpl	125 Cafe Mocha 16oz Bld
18 Iced Coffee 6oz Mild	45 Latte 12oz Single	72 Hot Cocoa 6oz Mild	99 Mochaccino 10oz Sgl	126 Cafe Mocha 20oz Mld
19 Iced Coffee 6oz Reg	46 Latte 12oz Double	73 Hot Cocoa 6oz Reg	100 Mochaccino 10oz Dbl	127 Cafe Mocha 20oz Reg
20 Iced Coffee 6oz Bold	47 Latte 12oz Triple	74 Hot Cocoa 6oz Bold	101 Mochaccino 10oz Tpl	128 Cafe Mocha 20oz Bld
21 Iced Coffee 8oz Mild	48 Latte 16oz Single	75 Hot Cocoa 8oz Mild	102 Mochaccino 12oz Sgl	129 Shot of Chocolate
22 Iced Coffee 8oz Reg	49 Latte 16oz Double	76 Hot Cocoa 8oz Reg	103 Mochaccino 12oz Dbl	130 Shot of Milk
23 Iced Coffee 8oz Bold	50 Latte 16oz Triple	77 Hot Cocoa 8oz Bold	104 Mochaccino 12oz Tpl	
24 Iced Coffee 10oz Mild	51 Latte 20oz Single	78 Hot Cocoa 10oz Mild	105 Mochaccino 16oz Sgl	
25 Iced Coffee 10oz Reg	52 Latte 20oz Double	79 Hot Cocoa 10oz Reg	106 Mochaccino 16oz Dbl	
26 Iced Coffee 10oz Bold	53 Latte 20oz Triple	80 Hot Cocoa 10oz Bold	107 Mochaccino 16oz Tpl	

Custom Logo-Wi-Fi Setup



TAP CENTER OF LOWER BAR TO **ACCESS PROGRAMMING**




SETUP



TO ENTER TABLET **SETTINGS SCREEN**


1. PRESS "Wi-Fi" ICON TO ACCESS WIFI SETUP & **CONNECT TO LOCAL WIFI**

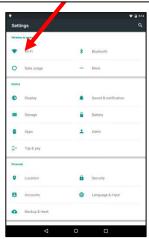


2. TURN "WI-FI" ON




3. SELECT "WI-FI" **NETWORK**

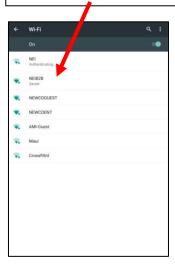

4. ENTER PASSWORD AND CONNECT

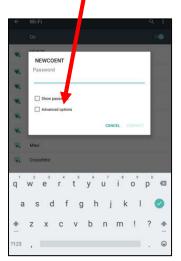


5. TURN MACHINE **POWER OFF THEN** ON AGAIN USING **SWITCH AT REAR LEFT OF MACHINE**

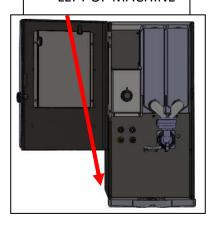

Install Custom Logo (Sleep Screen)

(ANDROID VERSION)

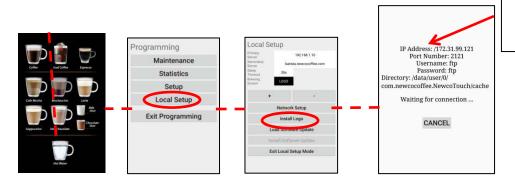

THIS ADDRESS IS UNIQUE FOR EVERY MACHINE. NOTE THAT IT IS USED FOR THE HOST ADDRESS WHEN SETTING UP COMMUNICATION SITE

Install Logo Instructions-Custom Sleep Screen (Android Version)

INSTALL AN FTP FILE TRANSFER
APP ONTO A LOCAL PHONE OR
TABLET. CONNECT THE LOCAL
PHONE OR TABLET TO THE
SAME WIFI NETWORK AS THE
BISTRO-TOUCH.
APPLICATION EXAMPLE SHOWN
IS AN FTP APP FOR ANDROID
SETUP FTP CONNECTION AS
SHOWN-COPY INFORMATION
FROM BISTRO-TOUCH AS
SHOWN ON SCREEN-NOTE-EACH
MACHINE HAS A UNIQUE IP
ADDRESS

3. TOUCH SITE TO OPEN CONNECTION, SELECT "LOCAL" WHEN CONNECTED

1. OPEN THE APP AND COPY SETTINGS FROM BISTRO TOUCH-SAVE SETUP IP Address: /172.31.99.121 Port Number: 2121 Username: ftp Password: ftp Credentials (optional) Directory: /data/user/0/ om.newcocoffee.NewcoTouch/cache ftp Waiting for connection ... int: ftp Always prompt for credentials CANCEL Default folders (optional Remote: /data/user/0/com.newcocoffee.NewcoTouch/cache

CANCEL

CONNecting

CANCEL

CONNecting

CANCEL


CONNecting

CANCEL

CONNecting


4. BISTRO-TOUCH SCREEN WILL CHANGE TO FINISH.
PRESS TO EXIT, THEN EXIT SETUP MENUS. TURN
OFF WIFI, SEE PAGE 19 TO REFERENCE NETWORK
SETTINGS AND 4, TURN OFF



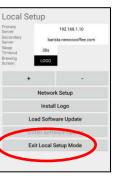





Install Logo Instructions-Custom Sleep Screen

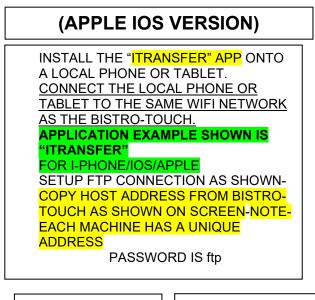


1. OPEN THE APP AND SLELCT FTP/FTPS/SFTH, ADD SERVER,

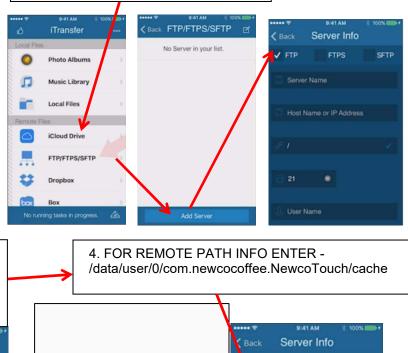

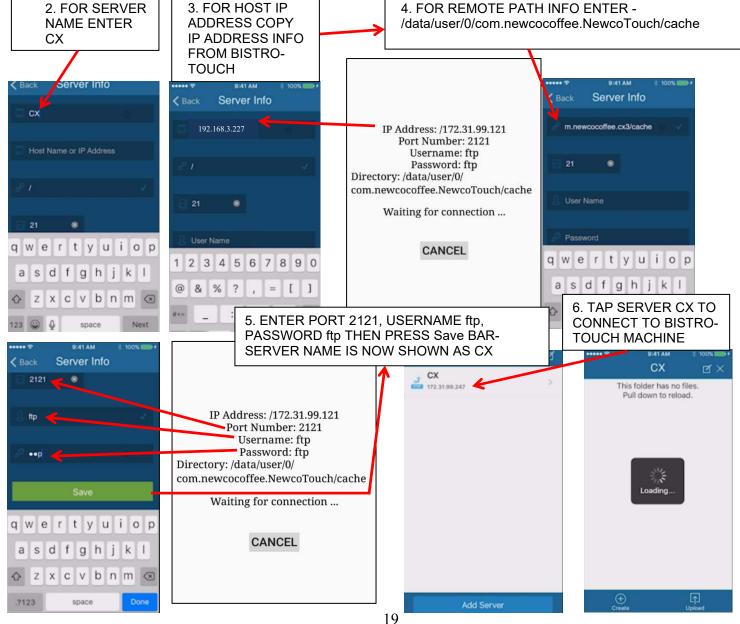

Install Logo Instructions-Custom Sleep Screen Cont'd


7. STATUS ON BISTRO-TOUCH MACHINE CHANGES TO Connected-Waiting for transfer

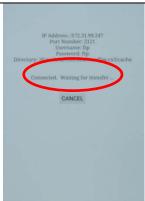


10. SELECT THE IMAGE TO BE TRANSFERRED THEN SELECT Upload



8. TO SELECT A FILE TO TRANSFER SELECT THE UPLOAD BUTTON

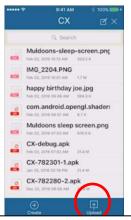


11. FILE WILL TRANSFER TO THE BISTRO-TOUCH MACHINE 9. SELECT THE DIRECTORY WHERE THE IMAGE FILE TO BE TRANSFERRED RESIDES

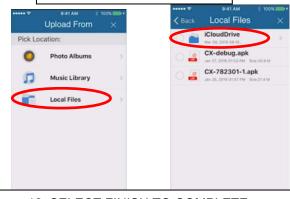

12. SELECT FINISH TO COMPLETE TRANSFER, THEN EXIT FROM PROGRAMMING SCREENS. TURN OFF WIFI, USING NETWORK SETTINGS, SEE PG. 17





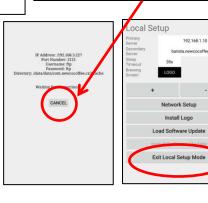



13. CYCLE MACHINE POWER OFF / ON USING SWITCH AT REAR LEFT OF MACHINE

Programming --QR Codes



FOR "TOUCH AND COMBINED" OPERATIONS:

TAP 3 TIMES ON CENTER OF TOP BAR

THEN TAP 3 TIMES ON CENTER OF BOTTOM BAR TO ENTER SECONDARY PROGRAMMING MODE IF A BREWING ICON IS ACCIDENTLY TOUCHED USE THE

RETURN ARROW TO TRY AGAIN.





FOR "TOUCHLESS" ONLY OPERATION:

TAP 3 TIMES IN TOP LEFT CORNER.

THEN TAP 3 TIMES ON BOTTOM RIGHT CORNER.

TO ENTER LOWER-LEVEL PROGRAMMING: TAP 3 TIMES ON BOTTOM RIGHT CORNER.

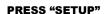


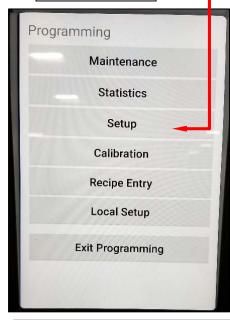


Setup Water Temperature 180 Powder Tracking OFF Energy Save Mode Energy Save Time 4.0 DISPEN Cup Light Global Ratio 1 30 Water Filter Size OFF Global Ratio 2 Call for Service Comb-Touchless (seconds) Drink Selection Menu **Restore Factory Settings**

Exit Setup Mode

"TOUCHLESS" MODE IS OFF.
TOUCH SCREEN OPERATION
ONLY. QR NOT AVAILABLE.

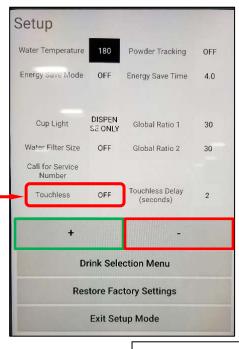

"TOUCHLESS" MODE IS ON.
TOUCHLESS OPERATION ONLY.
QR READY.

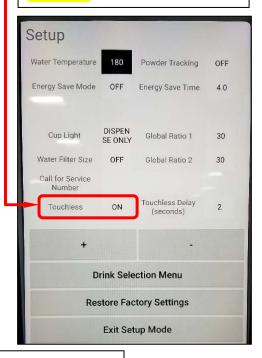

PRESS THE "TOUCHLESS" BUTTON TO HIGHLIGHT EITHER "OFF", "ON", OR "COMBINED". PRESS THE "+" OR "-" TO CHANGE MODES.

"TOUCHLESS COMBINED MODE IS ON. TOUCH SCREEN & TOUCHLESS OPERATIONS AVAILABLE . QR READY.

Programming QR Codes Cont'd



QR Screen for "Touchless Combined". Use smartphone to get code for recipes. Follow instructions on menu.





QR Screen for "Touchless On". Follow the instructions in above menu. The instructions will take you to the next page's menus and further instructions.


Screen for "Touchless Off". Touch screen only. QR not available.

Programming QR Codes Cont'd

NOTE-FRENCH AND ENGLISH LANGUAGES CAN BE TOGGLED FROM THIS SELECTION




The following menus & instructions are for both "Touchless On" & "Touchless Combined". After scanning the QR code with your smartphone camera the above menu will appear. Choose the desired recipe.

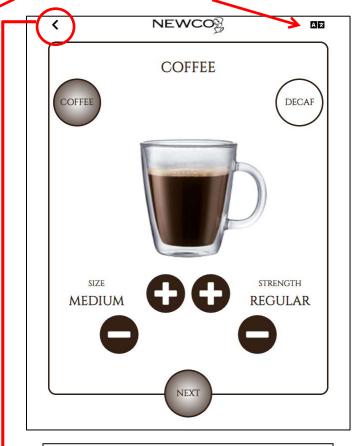

After choosing the recipe, the cup size, strength of the drink and in this case regular or decaf coffee from the above settings can be made. If the chosen recipe is incorrect, press the return arrow in the **top left corner** to return to the previous recipe screen. After the desired recipe is chosen, press **Next**.

Programming QR Codes Cont'd

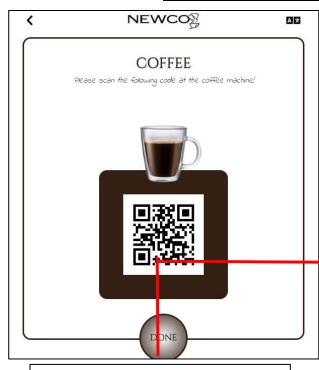

Hold the QR Code up to the scanner on the door. Recipe will begin to brew automatically and shut off once the scanner recognizes the Code.








If for any reason the brewing process needs to be stopped press the **CANCEL** button to get to "Cancel" Screen.
Once the brew cycle is finished the drink is ready.



Daily Cleaning Instructions

- 1. Push and hold "Rinse" Button until water runs clear (Rinses Mixing bowl and Coffee Mix Chamber) Empty and remove cup
- 2. Rotate Tab on Whipper Base Counterclockwise to "Five O-Clock"
- 3. Pull and rotate Dispense Nozzle away from Whipper Bowl
- 4. Lift and remove Steam Cap from Whipper Bowl, Pull and Remove Whipper chamber from Base
- 5. Wash Steam Cap, Whipper Bowl and Whipper Blade in Warm Soapy Water
- 6. Remove Coffee, Milk & Chocolate Canisters & wipe Product Compartment with warm soapy water
- 7. Dry parts with a clean dry towel and re-assemble Whipper Chamber-Secure by turning tab clockwise on Whipper Base to "Six O-Clock"

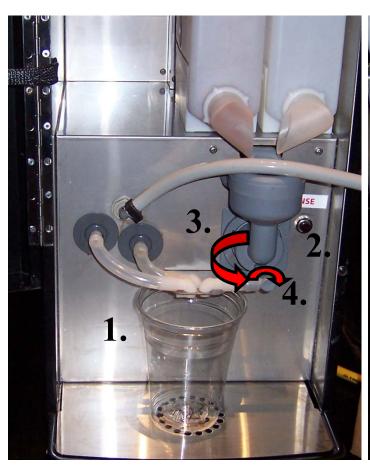




Whipper Disassembly

Whipper Assembly PN 767377

ITEM#	PART NUMBER & DESCRIPTION	
1	767376 WHIPPER STEAM CAP	
2	767195 WHIPPER MOTOR	
3	767196 BASE, WHIPPER MOUNTING	
3.5	767390,O-RING WHIPPER BASE RED [NOT SHOWN]	
4	767197 WHIPPER IMPELLER	
5	767365 WHIPPER BOWL	
6	767200 WHIPPER NOZZLE	
7	781566 WHIPPER SEAL (REPLACE AFTER 5000 CYCLES)	

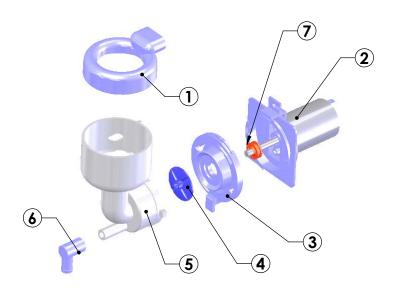

Cleaning & Sanitizing Instructions

1. Remove product from storage area and disconnect BIB connectors as shown in **Fig's 1 & 2**





- 2. Place an empty container in the dispense area of the machine as shown in **Fig. 3**
- Connect the cleaning solution to the BIB connector for Pump and connect cleaning BIB (PN 900083) as shown in Fig 4





Cleaning Instructions

- 1. Remove the product BIBs from the machine and connect a BIB of cleaning solution to the PUMP 1 (COFFEE) BIB connector as shown in figs. 1-4 page 27.
- 2. Enter Cleaning and Priming Menu (Page 14)
- 3. Press the Clean Pumps button on the display panel to enter Cleaning Mode.
- 4. Display message will read "Connect Cleaning Solution to Bib Connector".
- 5. Place an empty 12 oz cup in the dispense area. Press "Clean Coffee Pump" button to Start- Cleaning Cycle will start and finish automatically.
- 6. Cleaning cycle runs 2.5 minutes total: pump 45 sec., dwell 90 sec., & water 15 sec
- 7. When cleaning cycle ends, disconnect the BIB of cleaning solution from the Pump BIB connector and replace the coffee BIB with new product. The machine will automatically advance to the Prime Pumps mode.
- 8. To Prime: Press and hold the "Prime Coffee Pump" button until a steady stream of product flows from the dispense area into the vessel.
- 9. Change Cleaning solution to Pump 2 (DECAF) and repeat steps 3-8 to Clean and Prime Pump 2 (DECAF).
- 10. Exit to Home screen



when finished.

11. Discard the Contents of the 12 oz cup.

Weekly Sanitizing Instructions

- 1. Following daily cleaning instructions on page 25.
- 2. Remove the bag connector from the product box and disassemble or prop open the internal valve to allow free flow of product through the connector. NOTE: Cutting the mating fittings from an empty bag makes an excellent "free flowing" connector for this purpose.
- 3. Place the bag connector into a one-gallon (3.8 liter) container of warm soapy tap water 140°F (60°C).
- 4. Place an empty container under dispense tip and activate the corresponding button until the clean soapy water is dispensed from the dispense tip.
- 5. Repeat steps 3 and 4 with warm tap water 140°F (60°C) to rinse the soapy water from the pump tubing. Continue dispensing until the water is clear, and no soapy water is being dispensed.
- 6. Prepare 1-gallon (9.46L) of sanitizing solution by dissolving 1 tablespoon of household bleach into 1-gallon (9.46L) of 120°F (48.9°C) water to ensure 200 ppm of available chlorine.
- 7. Place the coffee connector in the sanitizing solution. Again, repeat steps 3 and 4 with the sanitizing solution, ensuring that the bag connector remains covered in sanitizer. Once sanitizing solution is being dispensed, stop dispensing and allow the solution to sit for 5 minutes.
- 8. Repeat step 5 to flush out the sanitizing solution from the pump tubing.
- 9. Remove the mating connector from the bag connector.
- 10. Reattach the bag connector to product BIB.
- 11. Activate the Coffee Mild button until coffee appears, then dispense 2 8- ounce cups of coffee and discard
- 12. Remove Whipper Components as shown on page 25
- 13. Soak Whipper Components in remaining unused sanitizer for 5 minutes, then rinse thoroughly and let air dry before re-installing.

NOTE: Adapters are necessary for flushing and cleaning the product lines. They keep the check valve open during flushing. Adapters are available for purchase from Newco Enterprises, Inc. (1-800-325-7867)

Newco also supplies BIB cleaning solutions that fit both Scholle and QCD connectors.

P/N 320282 QCD FLUSH ADAPTER P/N 120508 SCHOLLE FLUSH ADAPTER P/N 900083 EASY CLEAN CLEANER, SCHOLLE P/N 900084 EASY CLEAN CLEANER, QCD

Service Notes & Troubleshooting











These error screens will display a service phone number to call if entered in "Setup" Menu (Page 13)

For QR errors see pg. 31

*Usually repairing a bad connection or replacing the indicated motor will remedy the problem.

Display Reads	Possible Cause(s)	<u>Remedies</u>	<u>Notes</u>
Fill Timeout Error	Water shut off to Machine	icheck water Shooty Soniton	Initial fill time longer than 4 minutes
	Supply Line Blocked or too small	Repair or Replace as needed	Fill time Longer than 1 Minute
	Water Filter Restricted	Renlace-Service Required	Water Probe has a 60 second Hysteresis cycle
	Inlet Solenoid valve Faulty	Replace-Service Required	
	Control Board Failure	Replace-Service Required	
Thermistor Errors	Thermistor not plugged in	Make sure plug in housing is latched	Open or Shorted Thermistor
	Faulty Thermistor	Replacement	
	Control Board Failure	Replace-Service Required	
Heater Errors	Faulty Thermistor	Replacement	4 Minute Continuous Heater Run
	Faulty Heater Element	Replace-Service Required	
	Control Board Failure	Replace-Service Required	

DRAINING THE HOT WATER TANK

THE DRAIN TUBE IS CONNECTED TO BLACK PLUG ON REAR LOWER PANEL OF MACHINE. TANK HOLDS APPROX 3/4 US GALLON.

THE HOT WATER TANK CAN BE DRAINED FROM THE REAR OF THE MACHINE – UNPLUG MACHINE FROM POWER SOURCE. CAUTION-UNLESS THE TANK IS LEFT TO COOL THE WATER IS EXTREMELY HOT AND CAN CAUSE HARMFUL BURNS. REPLACE DRAIN PLUG, ENSURE HOSE CLAMP IS TIGHT AND REPOSITION DRAIN HOSE BEFORE RE-FILLING THE HOT WATER TANK.

Service Notes & Troubleshooting

The following Error Codes may appear if the codes are not entered correctly or there is an issue with the scanner unable to read the code. If there are issues, please call Newco Tech Services (1-800-556-3926) for help.














Wiring Diagram

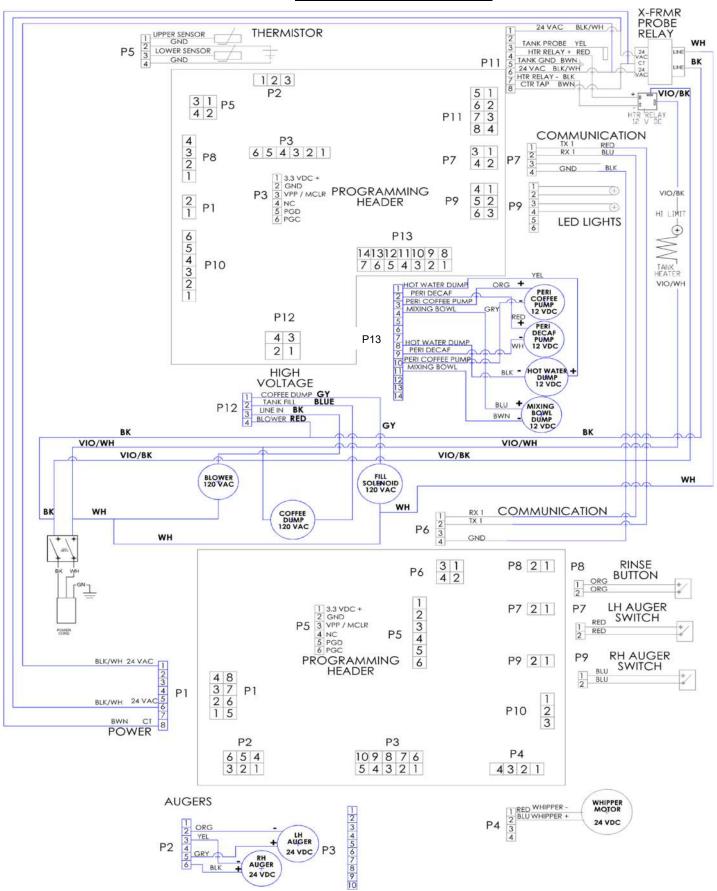

Notes