


# VACULATOR THERMAL SERVER

## DISASSEMBLING INSTRUCTIONS

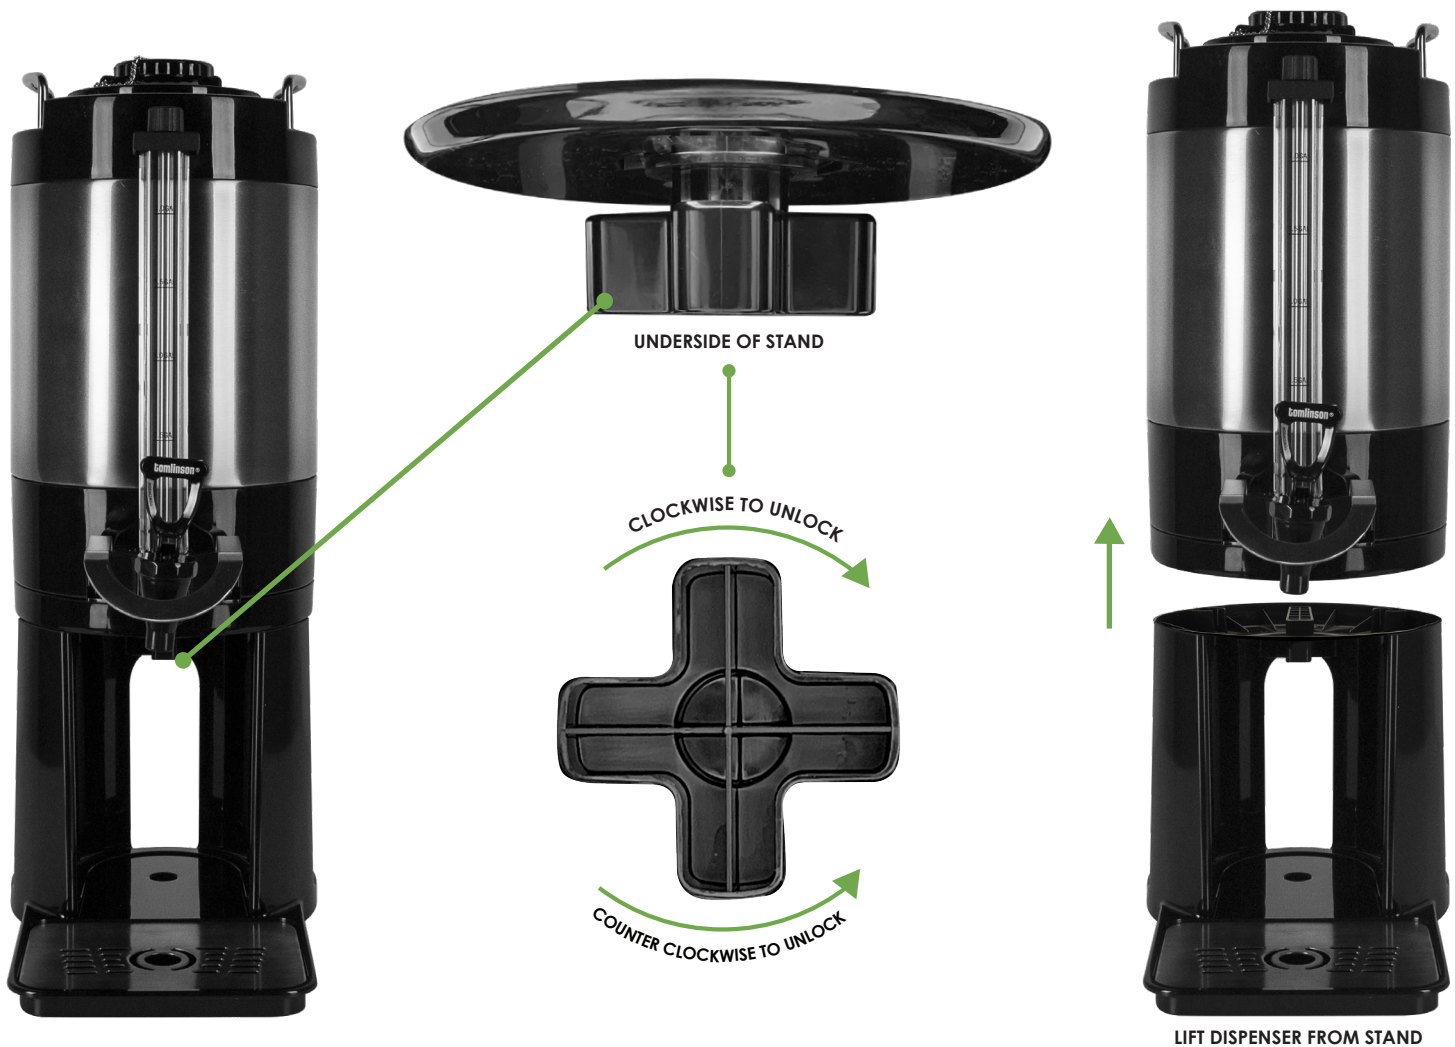

1. Find the release handle on the underside of the server stand.
2. Turn the handle clockwise to release the server from the stand.
3. Lift the server straight up to remove it from the stand.
4. Clean the server.
5. Place the server back on the stand.
6. Lock the server on the stand by turning the release handle counter clockwise.

